


USER INSTRUCTIONS

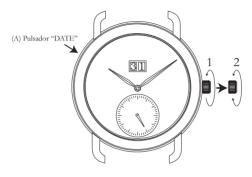

1.Start:

Being an automatic watch we suggest you wind it up completely the first time you use it (Position 1) The crown will need to be wound manually 15-20 times to develop a sufficient power reserve to ensure the accuracy of the timepiece. You do not have to repete this action every day while the watch is in use, the watch will charge itself automatically when is in use.

2. Setting of the time:

Pull out the crown (Position 2) and move the hands to the desire time.

3. Adjusting the date:

There are 2 ways of doing this: By pressing the pusher (A) situated on the superior external left side of the watch, or when adjusting the time every 24 hours by moving the hands (Position 2). If the month has fewer days, it must be adjusted manually.

Note:

* The date changes somewhere between 0:00 am and 5:30 a.m. hours or a little later.