




COLOMER & SONS  
SPAIN

## USER INSTRUCTIONS

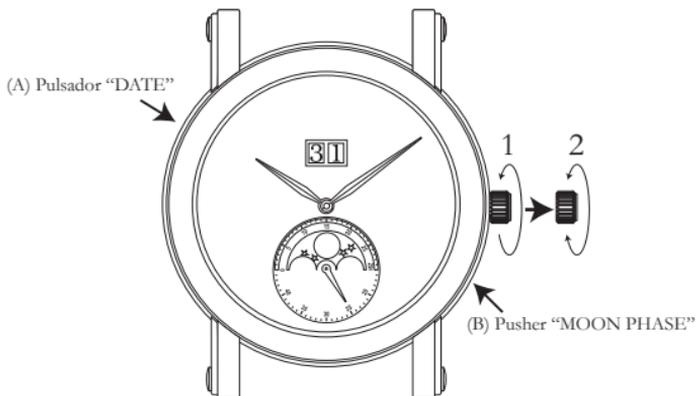

### 1. Start:

Being an automatic watch we suggest you wind it up completely the first time you use it (Position 1) Unscrew the crown and in this position rotate. The crown will need to be wound manually 15 – 20 times to develop a sufficient power reserve to ensure the accuracy of the timepiece. You do not have to repeat this action every day while the watch is in use, the watch will charge itself automatically.

### 2. Setting of the time:

Pull out the crown (Position 2) and move the hands to the desired time.

### 3. Adjusting the date:

There are 2 ways of doing this: By pressing the pusher (A) situated on the superior external left side of the watch, or when adjusting the time every 24 hours by moving the hands (Position 2). If the month has fewer days, it must be adjusted manually.

### Note:

\* The date changes somewhere between 0:00 am and 5:30 a.m. hours or a little later.

### 5. Adjusting the moon phase:

The moon dial represents the phase of the moon. Use the moon dial only as a guide to the age and phase of the moon when reading and setting the watch.

- Adjust by pressing the pusher (B) or Pull out the crown (Position 2), then turn the crown clockwise to turn the moon dial.

- SETTING THE MOON PHASE WITH THE AGE SCALE

\* Check on the age of the moon for a day. Check the newspaper or other source for the phase of the moon for today or tomorrow. subtract one day before a setting is made if the listings for tomorrow are used.

\* setting procedure (example age of the moon 4.4)

Pull the crown out to the first position. Turn the moon dial clockwise until the center of the moon is in line with 4.4 on the scale.

- SETTING THE MOON PHASE WITH OUT THE AGE SCALE

\* Check the newspaper or another source that lists the current age of the moon. Set the moon dial to the age (0, 7, 15 or 22) closest to that listed.

More accurate settings can be made at the time 01 the new moon (0) or full moon (15).

READING THE AGE OF THE MOON

The age of the moon is determined by the period between each new moon. This period is approximately 29.5 days.

New moon Moon's age: 0 Spring tide	First quarter moon Moon's age: 7 Neap tide	Full moon Moon's age: 15 Spring tide	Last quarter moon Moon's age: 22 Neap tide
			

From the phase 01 the moon In the display, you can tell the Size of the tide.

\* If you want to set more accurately the phases of the moon. we recommend to set it at the time of a New Moon (The Moon is hidden in the display ... New Moon) or a Full Moon (The Moon appears fully in the display ... Full Moon)