




COLOMER & SONS  
SPAIN

## USER INSTRUCTIONS

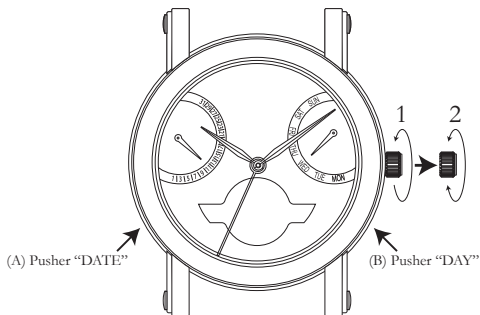

### 1.Start:

Being an automatic watch we suggest you wind it up completely the first time you use it (Position 1) Unscrew the crown and in this position rotate. The crown will need to be wound manually 15 – 20 times to develop a sufficient power reserve to ensure the accuracy of the timepiece. You do not have to repeat this action every day while the watch is in use, the watch will charge itself automatically.

### 2. Setting of the time:

Pull out the crown (Position 2) and move the hands to the desired time.

### 3. Adjusting the date:

There are 2 ways of doing this: By pressing the pusher (A) situated on the inferior external left side of the watch, or when adjusting the time every 24 hours by moving the hands (Position 2). This calendar has a “Flyback” system incorporated which returns the hand automatically on the last date of the month. If the month has fewer days, it must be adjusted manually.

### Note:

\* The date changes somewhere between 0:00 am and 5:30 a.m. hours or a little later.

\* Do not set the date between 9:00 p.m. and 0:30 a.m. The misusing can make the movement defective. The date may not change correctly the next day.

### 4. Adjusting the day:

There are 2 ways of doing this: By pressing the pusher (B) situated on the inferior external right side of the watch, or when adjusting the time every 24 hours by moving the hands (Position 2). This calendar has a “Flyback” system incorporated which returns the hand automatically on the last day of the week